

# ADDENDUM to H3/G4 780M Log Installation

May 2021

# valor<sup>®</sup> H3/G4 780M

## 1000BLKV2 Birch Logs— Replaces Installation Instructions for 1000BLK

### Description


The 1000BLKV2 log kit is an upgrade of the 1000BLK kit. Some of the logs have been altered and others removed for better fit and improved flame picture.

### Use of 1000BLKV2 Log Kit

This Addendum describes how to properly install the 1000BLKV2 Birch Log Kit into either an H3 or G4 780M Valor fireplace.

### Material Required

- 1000BLKV2 Birch Log Kit, which contains:
  - 10 logs
  - 2 cups of embers (bagged)

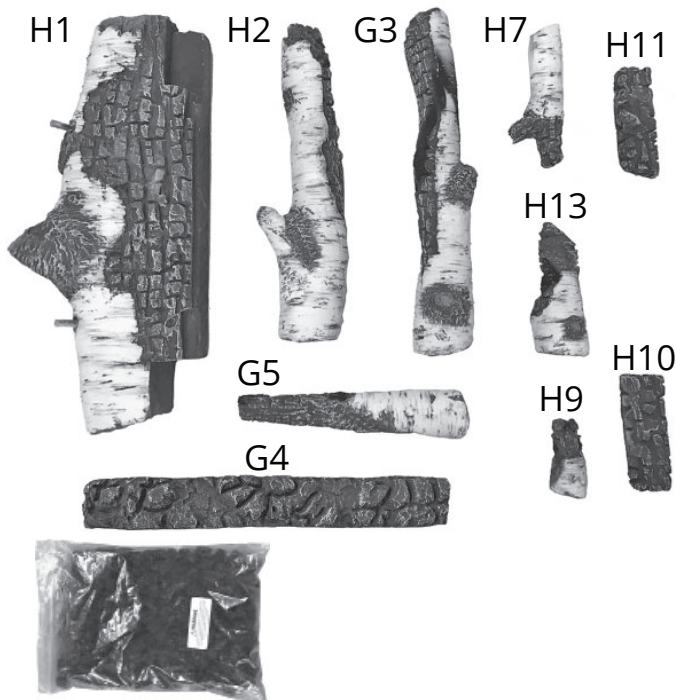


- Gloves, if desired

### Spare Parts

Item	Part Number
Log H1	4007463
Log H2	4007464
Log G3	4008161
Log G4	4008162
Log G5	4008163
Log H13	4008903
Log H7	4007469
Log H9	4007471
Log H10	4007472
Log H11	4007473
Embers—2 cup bag	4008304

### Burner cover/Rear log support

This kit can be installed on H3 or G4 780M fireplaces with either version of the burner cover/rear log support illustrated below:

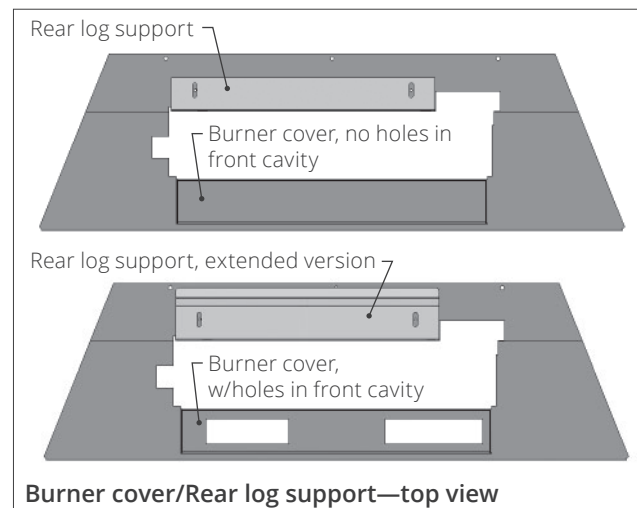

## Installation


Carefully unpack the kit. Note each log has its own number stamped on the bottom. Some logs have pegs to help you place them on other logs.

Install the logs as follows.

### 1. Prepare the fireplace.

#### a. H3 Fireplaces ONLY:

- i. Loosen (but do not remove) the two screws fastening the log support bracket to the burner cover platform—applies to both versions of log support bracket.

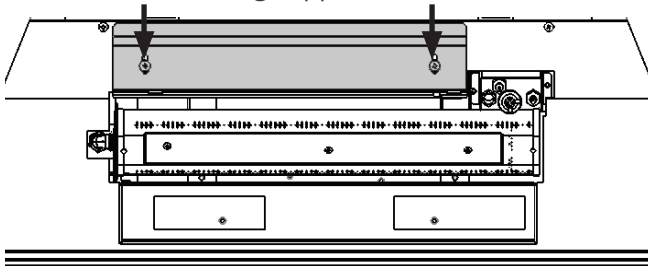


- ii. Slide the support bracket toward the rear of the fireplace, as far as it will travel.
- iii. Tighten screws down again.


#### b. G4 780M fireplaces ONLY:

Place base panels that shipped with the fireplace at the front of the support platform. See "Completed G4 780M 1000BLKV2 Assembly" on page 4 or the G4 780M Installation Manual for details if needed.


### 2. Place log H11 into the right hole in the front of the burner cover. Note the angled feature of H11 should be pointed to the right side.

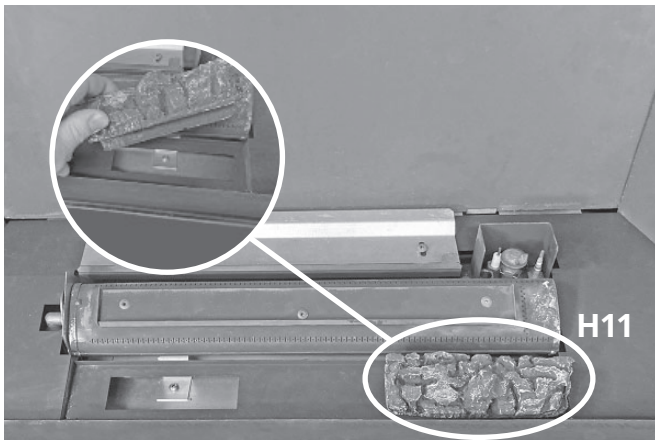


### 3. Place log H10 into the left hole in the front of the burner cover.

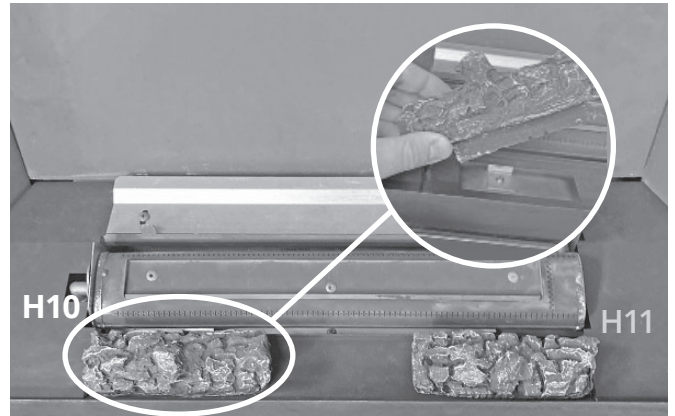

### 4. Place log H1 onto the rear support bracket, and slide it as far to the right as it will travel, gently resting the log against the pilot shield.

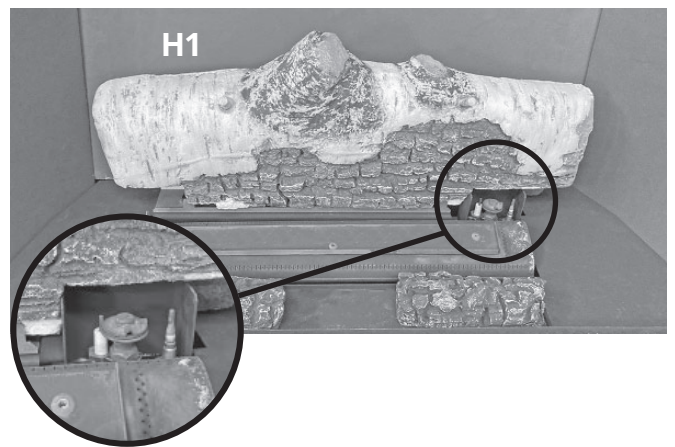


### 5. Place log G4 directly on the burner, its underside groove fitting on the front raised flange of the burner. Slide the log all the way to the left.

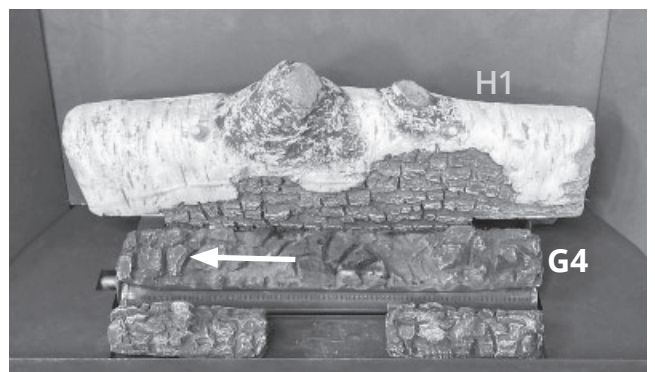




6. Place log H13 at the right end of G4, on top of H11.

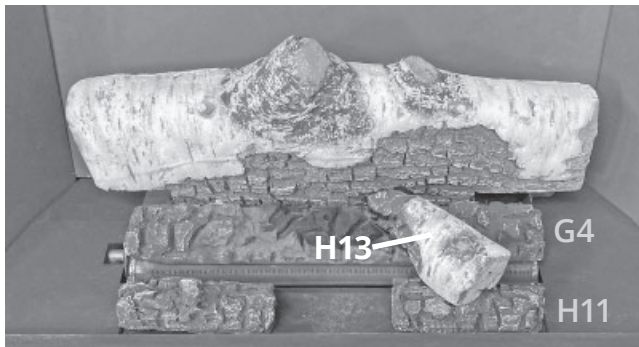


7. Place log G5 from the groove in H10 to the groove in H13.




8. Place log H7 from the left side of G4 to the top groove of G5.

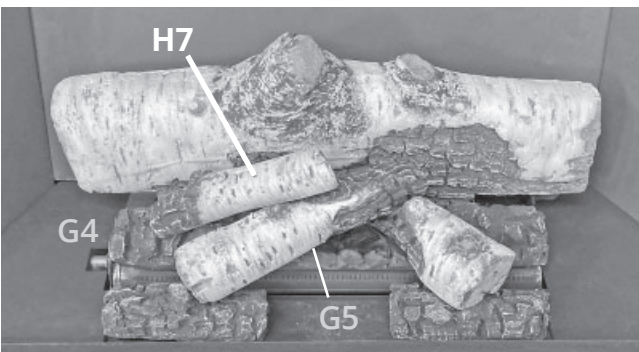

9. Place log G3 as shown. Note the hole in G3 fits onto the pin in H1.

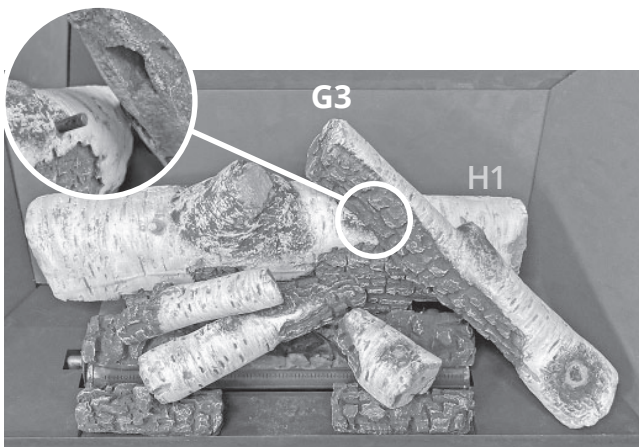


10. Place log H2 as shown. Note the hole in H2 fits onto the pin in H1.

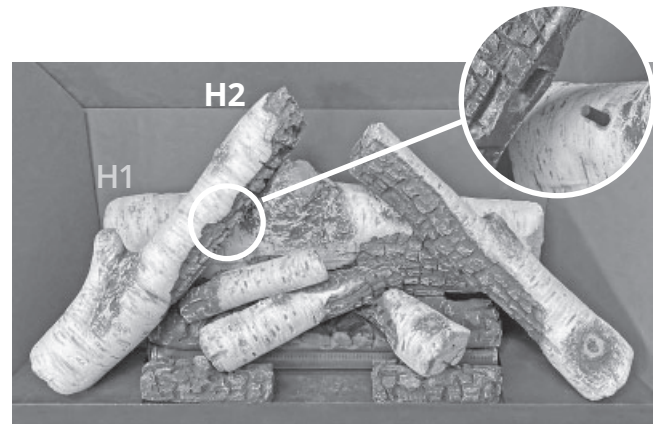

11. Place embers as shown, between and behind H10 and H11 as desired. You may not need to use all the embers.




12. Place log H9 on top of the embers between H10 and H11.

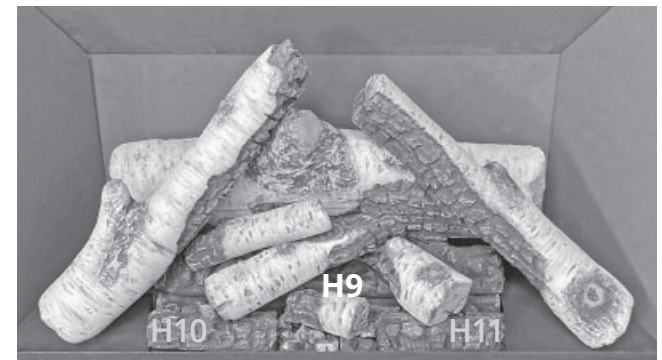


This completes the installation of the 1000BLKV2 kit into the fireplace. Complete the fireplace's installation using its Installation Manual.



### Completed H3 1000BLKV2 Assembly

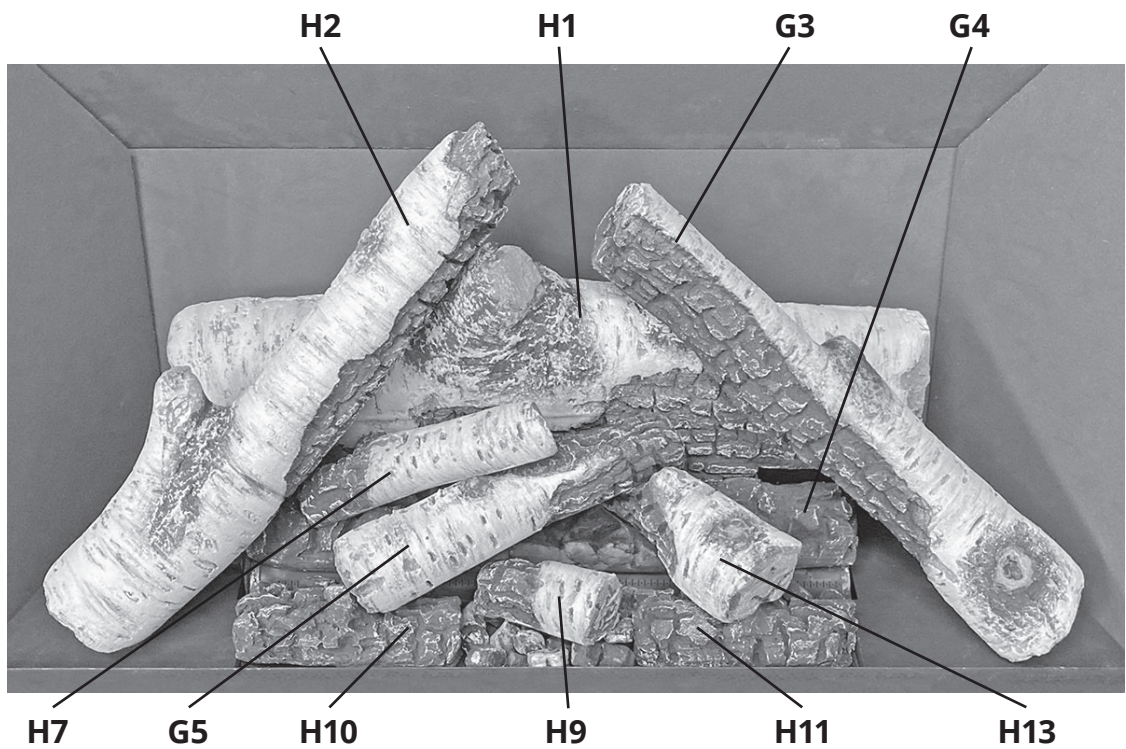

### Completed G4 780M 1000BLKV2 Assembly

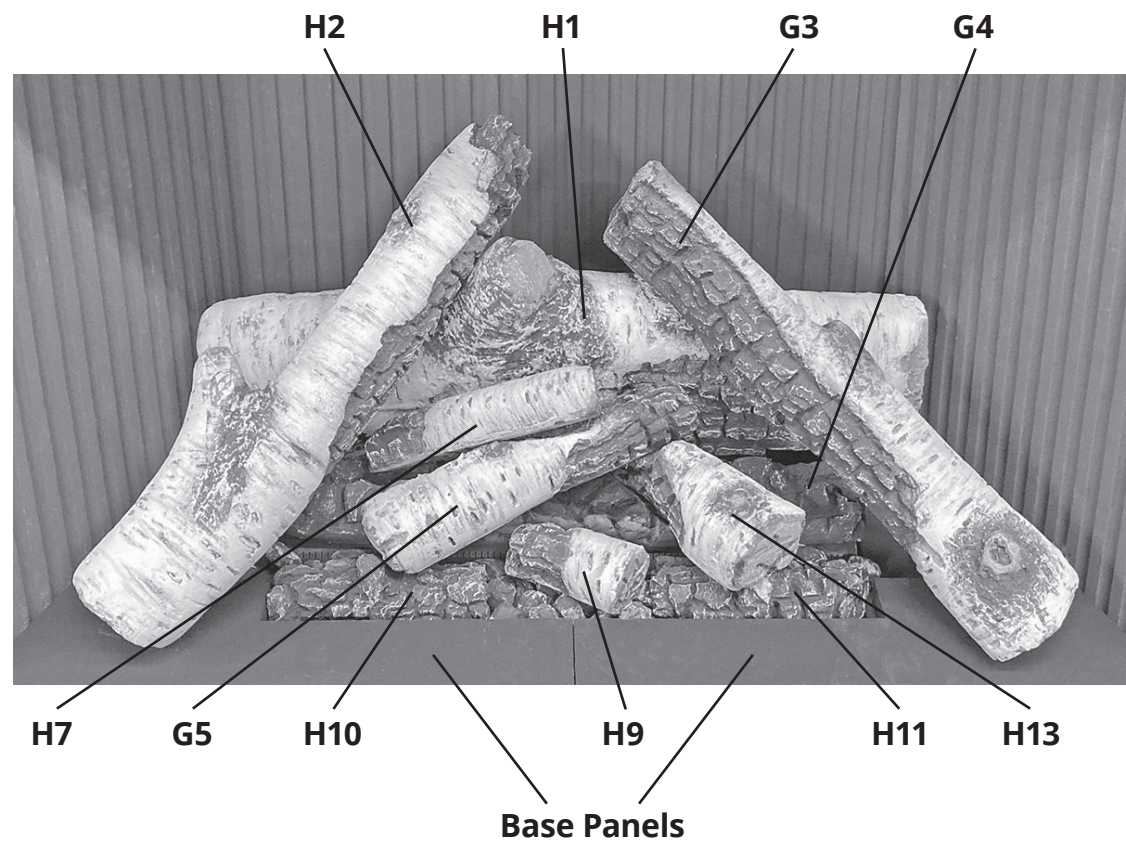

Because our policy is one of constant development and improvement, details may vary slightly from those given in this publication.

Designed and Manufactured by / for Miles Industries Ltd.

190 - 2255 Dollarton Highway, North Vancouver, B.C., CANADA V7H 3B1

Tel. 604-984-3496 Fax 604-984-0246

[www.valorfireplaces.com](http://www.valorfireplaces.com)

# ADDENDUM—Installation bûches H3/G4 780M

Mai 2021

# valor® H3/G4 780M

## Bûches de bouleau 1000BLKV2— Remplace les instructions d'installation 1000BLK


### Description

L'ensemble Bûches de bouleau 1000BLKV2 remplace l'ensemble 1000BLK. Certaines bûches ont été supprimées et d'autres modifiées pour un meilleur ajustement et une flamme améliorée.

Cet Addendum décrit comment installer l'ensemble Bûches de bouleau 1000BLKV2 dans les foyers Valor H3 et G4 780M.

### Pièces requises

- Bûches de bouleau 1000BLKV2 contenant :
  - 10 bûches
  - 1 sac de braises (2 tasses)
- Gants, si désiré

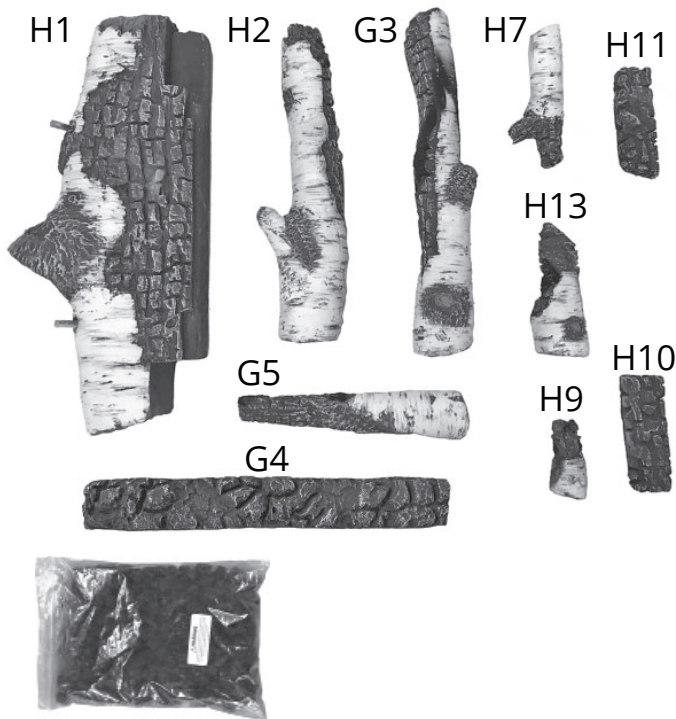


### Pièces

Description	Pièce n°
Bûche H1	4007463
Bûche H2	4007464
Bûche G3	4008161
Bûche G4	4008162
Bûche G5	4008163
Bûche H13	4008903
Bûche H7	4007469
Bûche H9	4007471
Bûche H10	4007472
Bûche H11	4007473
Braises—sac de 2 tasses	4008304

### Couvercle du brûleur/Support de bûche

Cet ensemble peut être installé dans les foyers H3 ou G4 780M avec une ou l'autre version du couvercle du brûleur et support de bûche arrière :

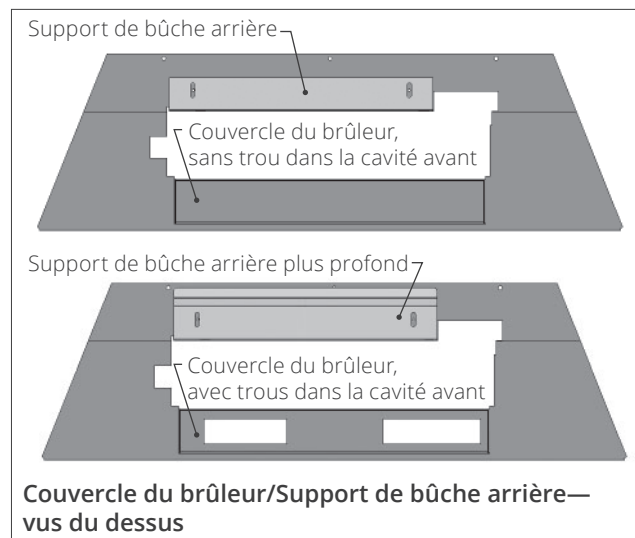




## Installation

Déballer l'ensemble avec soins. Chaque bûche comporte un numéro gravé en-dessous. Certaines bûches ont également des chevilles aidant à les tenir en place.

### 1. Préparez le foyer.

#### • Foyers H3 seulement.

- Dévissez, sans les enlever, les deux vis retenant le support de bûche—s'applique aux deux versions du support de bûche.

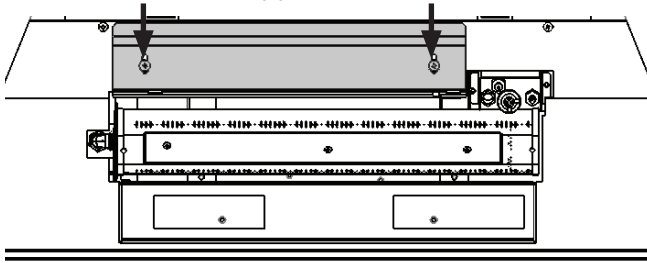


- Poussez le support le plus possible vers l'arrière du foyer.


- Resserrez les vis.

#### • Foyers G4 780M seulement. Assurez-vous que les briques avant soient installées. Si non, consultez la section d'installation des Panneaux dans le Guide d'installation du foyer et installez-les.


### 2. Placez la bûche H11, le bout angulaire à droite, dans la cavité de droite devant le brûleur.

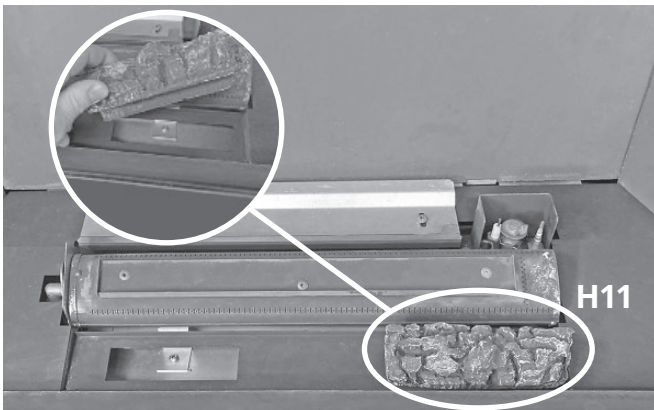


### 3. Placez H10 dans la cavité gauche, devant le brûleur.

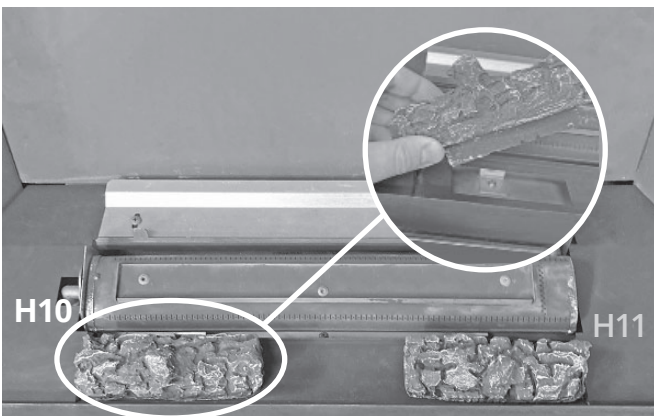


### 4. Placez H1 sur le support derrière le brûleur et poussez-la vers la droite contre l'écran de veilleuse.

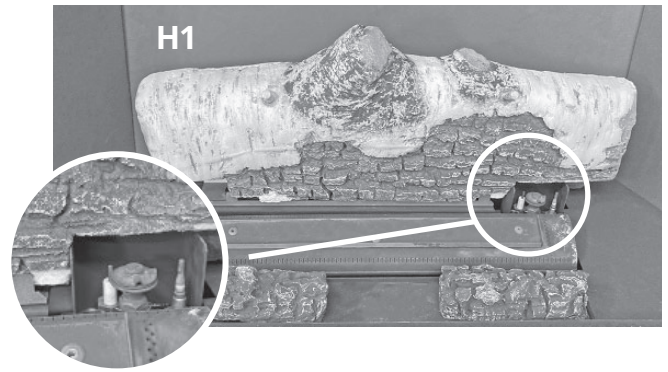

### 5. Placez G4 directement sur le brûleur, la fente sous la bûche sur le rebord montant du dessus du brûleur. Glissez la bûche le plus possible vers la gauche.

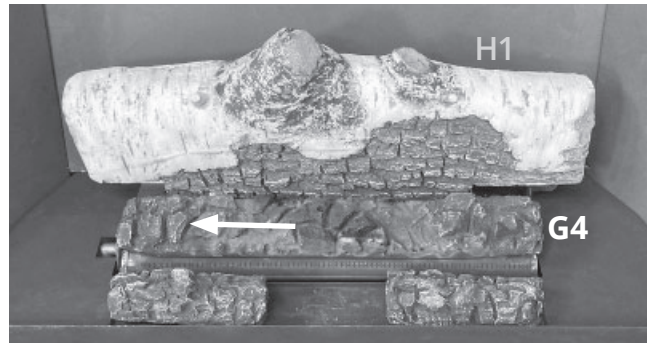


### 6. Placez le bout brûlé de H13 sur le centre droit de G4 et le bout pâle sur H11.

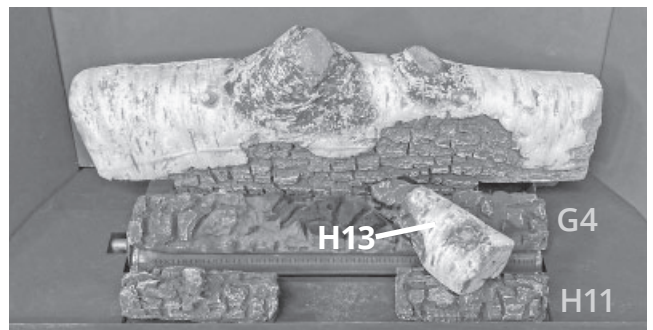


7. Placez le bout pâle de G5 dans l'encoche de H10 et le bout brûlé dans celle de H13.




8. Placez le bout brûlé de H7 sur le côté gauche de G4 et posez son bout pâle sur G5.

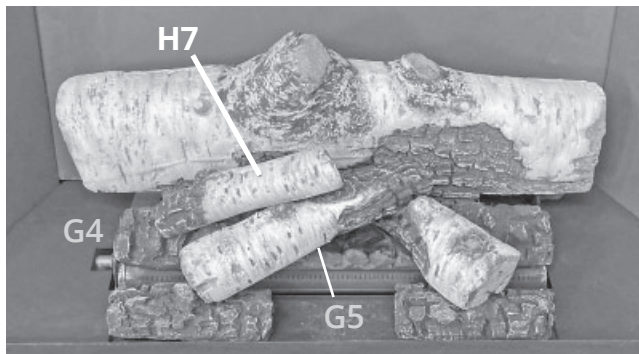

9. Placez G3 sur la cheville de H1 et posez son autre bout à droite de H11.

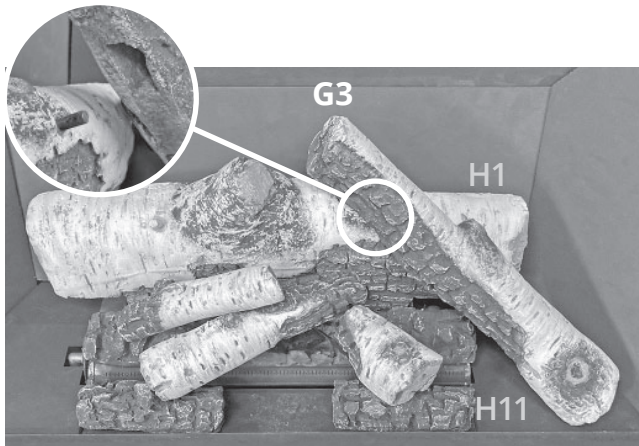


10. Placez H2 sur la cheville de H1 et posez son autre bout à gauche de H10.

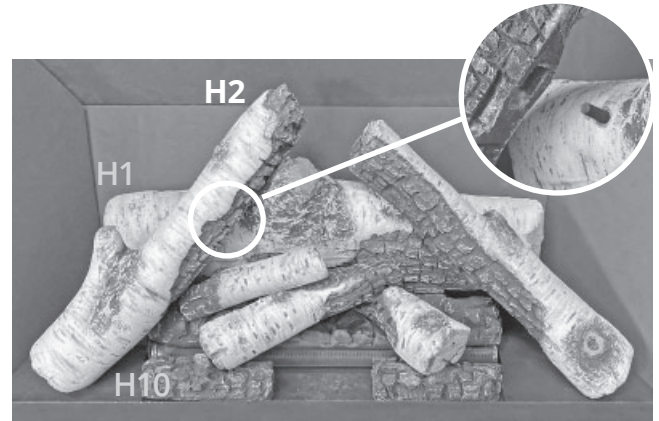

11. Placez des braises entre H10 et H11. Placez-en derrière ces bûches, au choix. Il n'est pas nécessaire d'utiliser toutes les braises.




12. Placez H9 sur les braises entre H10 et H11.

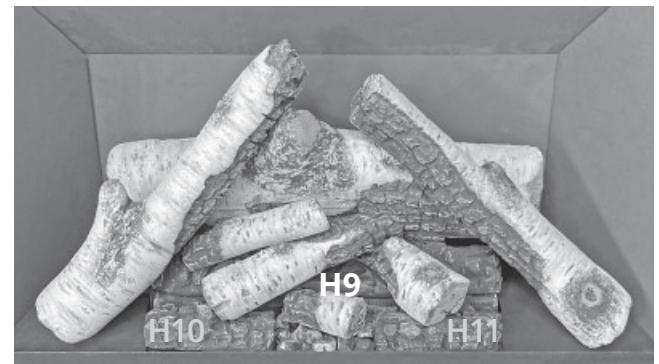


Une fois l'ensemble installé, continuez l'installation du foyer à l'aide du Guide d'installation fourni avec le foyer.



## Bûches de bouleau 1000BLKV2 dans le H3

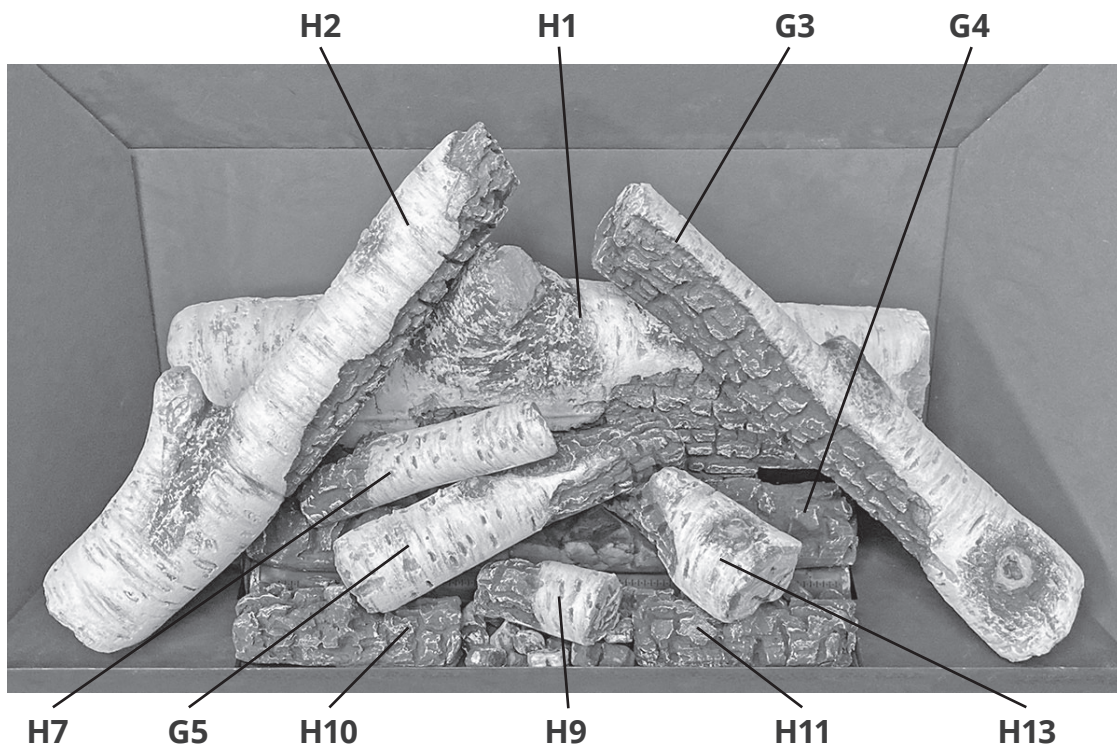

## Bûches de bouleau 1000BLKV2 dans le G4 780M

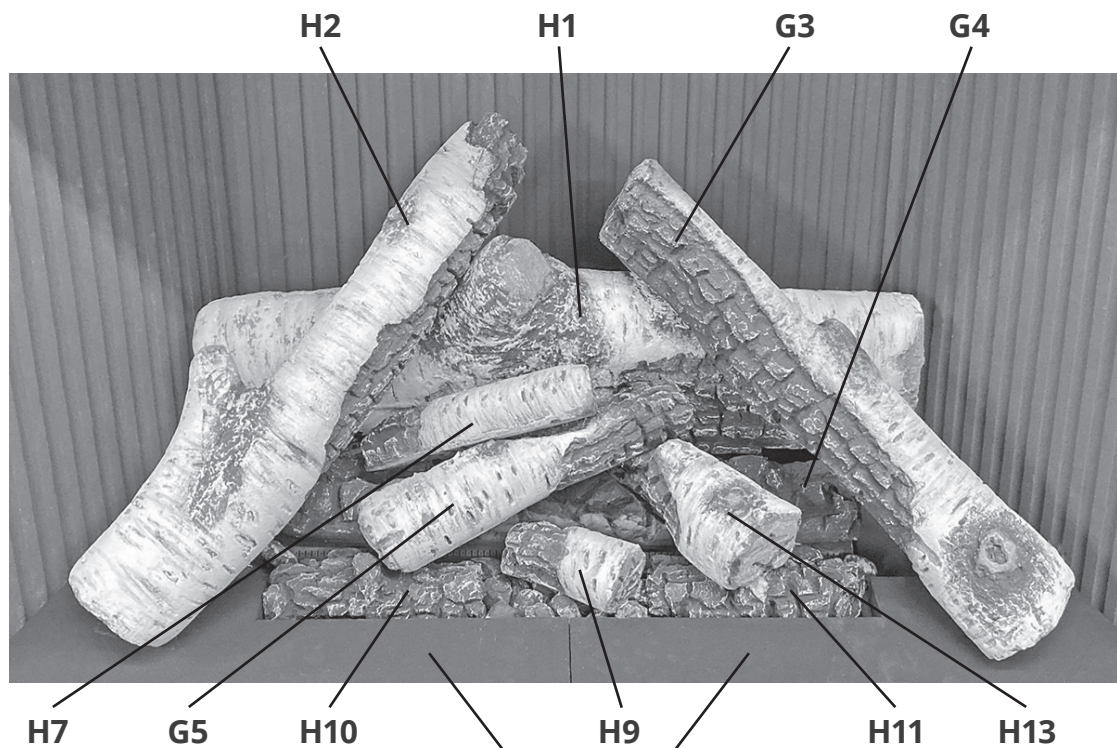

### Briques avant

Parce que nous favorisons une politique de développement continu, certains détails de la présente publication peuvent varier.

Conçue et fabriquée par / pour Miles Industries Ltd.

190 - 2255 Dollarton Highway, North Vancouver, BC, CANADA V7H 3B1

Tél. 604-984-3496 Téléc. 604-984-0246

[www.foyervalor.com](http://www.foyervalor.com)