

ADDENDUM to H3/G4 780M Log Installation

May 2021

valor® H3/G4 780M

1000LSKV2 Traditional Logs— Replaces Installation Instructions for 1000LSK

Description


The 1000LSKV2 log kit is an upgrade of the 1000LSK kit. Some of the logs have been altered and others removed for better fit and improved flame picture.

Use of 1000LSKV2 Log Kit

This Addendum describes how to properly install the 1000LSKV2 Traditional Log Kit into either an H3 or G4 780M Valor fireplace.

Material Required

- 1000LSKV2 Traditional Log Kit, which contains:
 - 10 logs
 - 2 cups of embers (bagged)

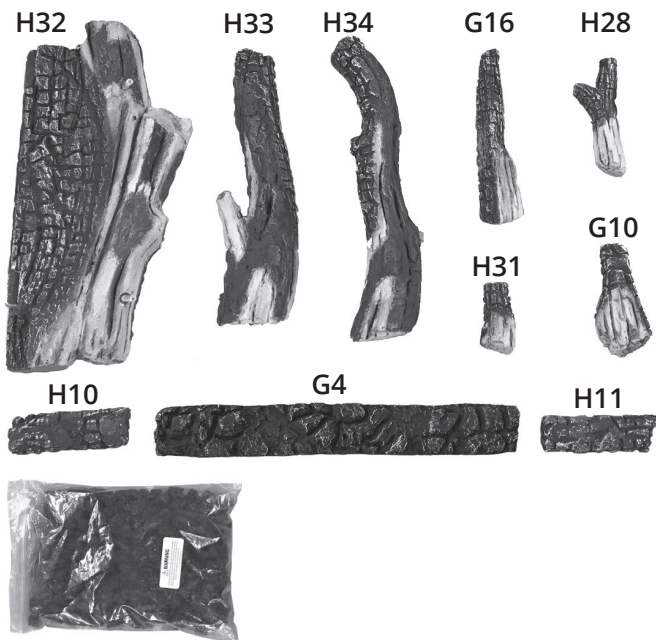


- Gloves, if desired

Spare Parts

Item	Part Number
Log H32	4008905
Log H33	4008906
Log H34	4008617
Log G4	4008162
Log G10	4008168
Log H28	4007505
Log G16	4008306
Log H31	4007508
Log H10	4007472
Log H11	4007473
Embers—2 cup bag	4008304

Burner cover/Rear log support

This kit can be installed on H3 or G4 780M fireplaces with either version of the burner cover/rear log support illustrated below:

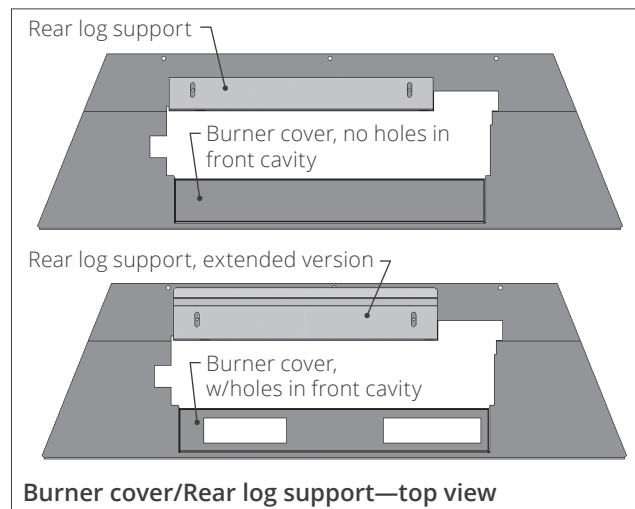

Installation


Carefully unpack the kit. Note each log has its own number stamped on the bottom. Some logs have pegs to help you place them on other logs.

Install the logs as follows.


1. **G4 780M fireplaces ONLY:**

Place base panels that shipped with the fireplace at the front of the support platform. See "Completed G4 780M 1000LSKV2 Assembly" on page 4 or the G4 780M Installation Manual for details if needed.


2. Place log H11 into the right hole in the front of the burner cover. Note the angled feature of H11 should be pointed to the right side.

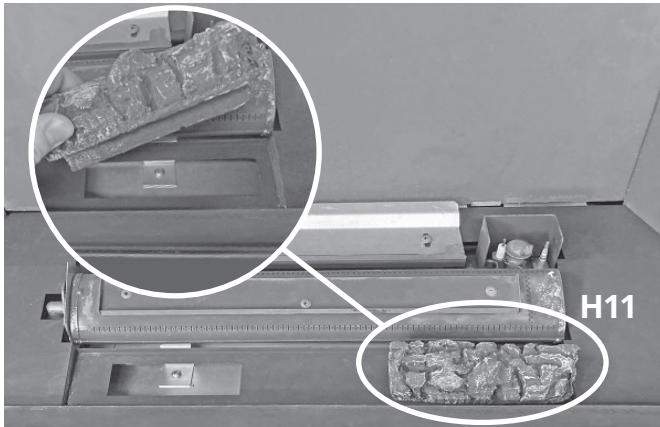



3. Place log H10 into the left hole in the front of the burner cover.

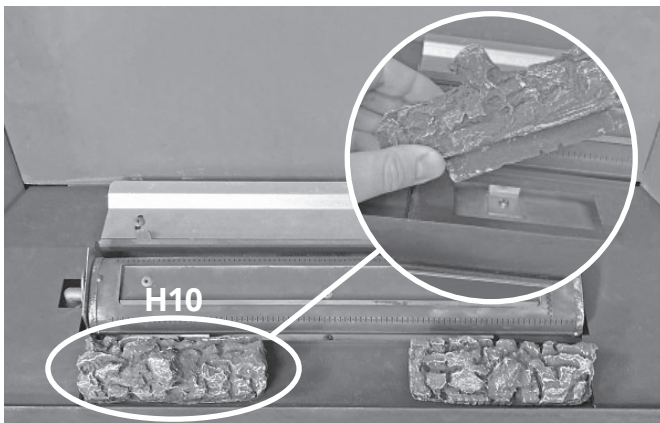


4. Place log H32 onto the rear support bracket, and slide it as far to the right as it will travel, gently resting the log against the pilot shield.

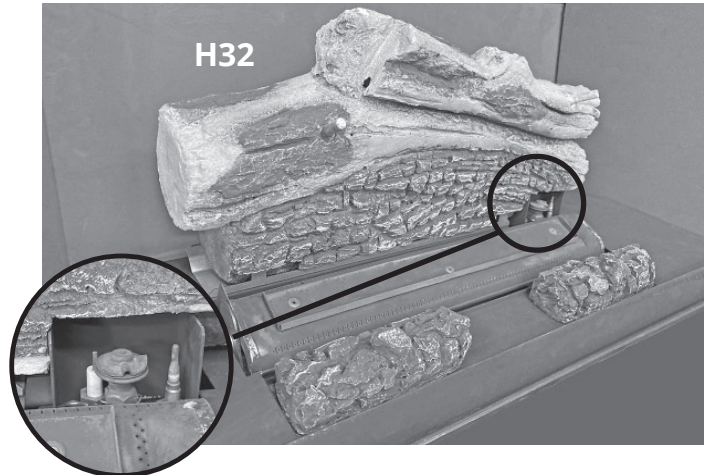


5. Place log G4 directly on the burner, its underside groove fitting on the front raised flange of the burner. Slide the log all the way to the left.

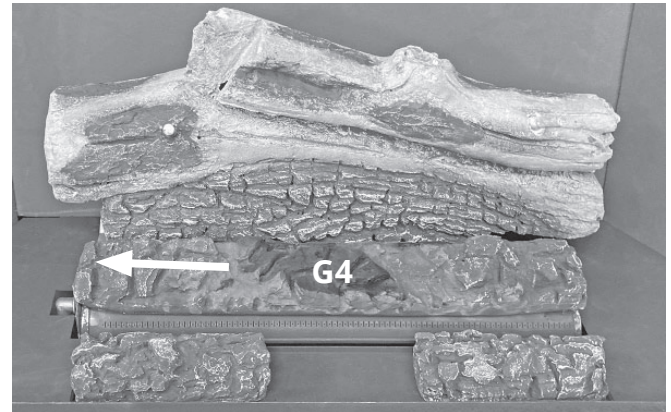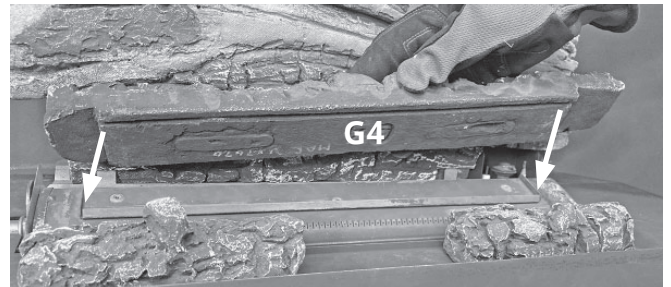


6. Place log G10 at the right end of G4, on top of H11.

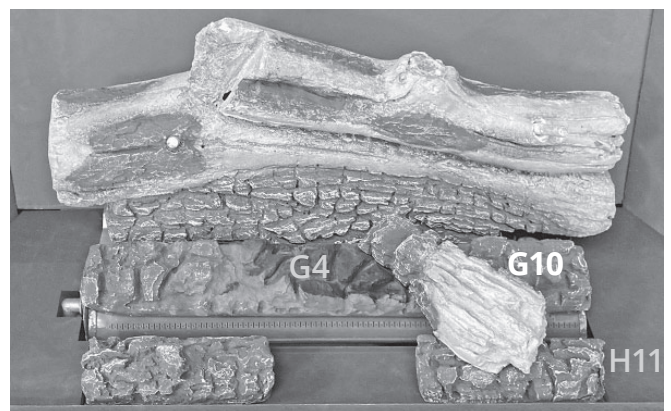


7. Place log G16 from the groove in H10 to the groove in G10.

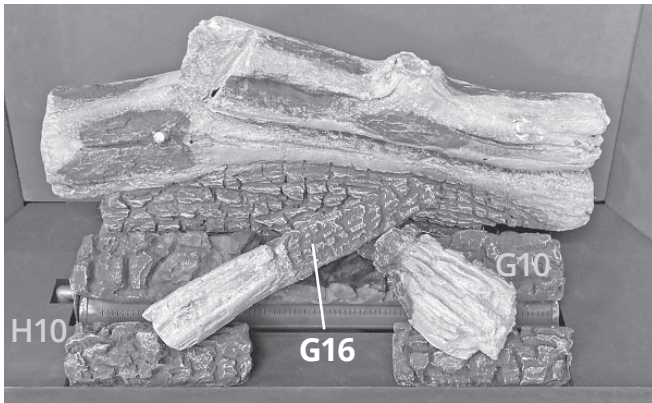


8. Place log H28 from the left side of G4 to the top of G16.

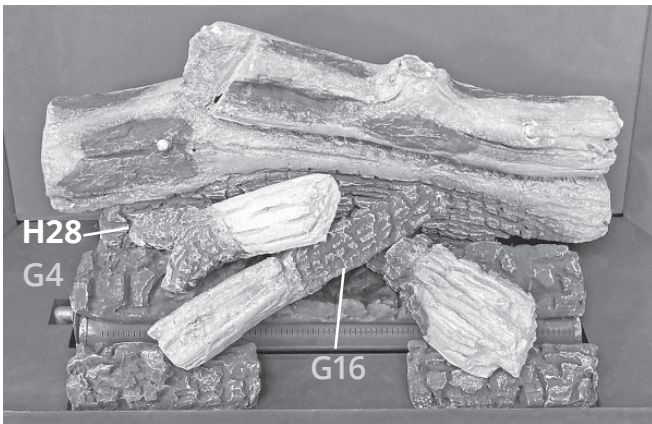

9. Place log H34 as shown. Note the hole in H35 fits onto the pin in H32.

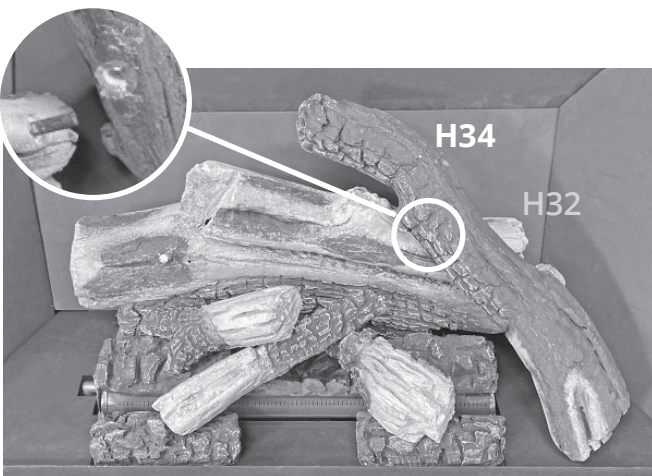

10. Place log H33 as shown. Note the hole in H33 fits onto the pin in H32.

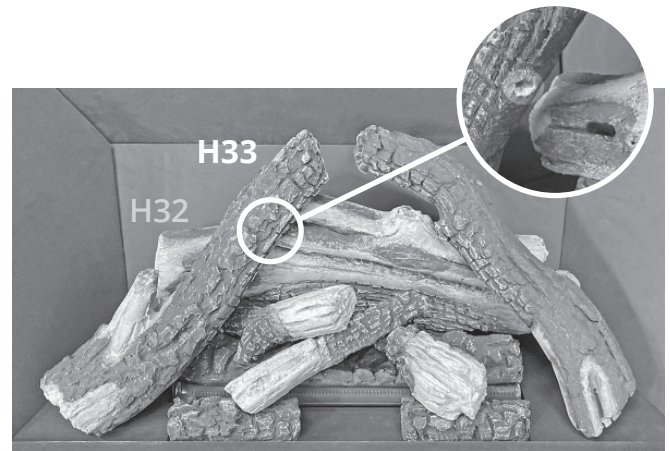

11. Place embers as shown, between and behind H10 and H11 as desired. You may not need to use all the embers.




12. Place log H31 on top of the embers between H10 and H11.




This completes the installation of the 1000LSKV2 kit into the fireplace. Complete the installation of the fireplace using its Installation Manual.

Completed H3 1000LSKV2 Assembly

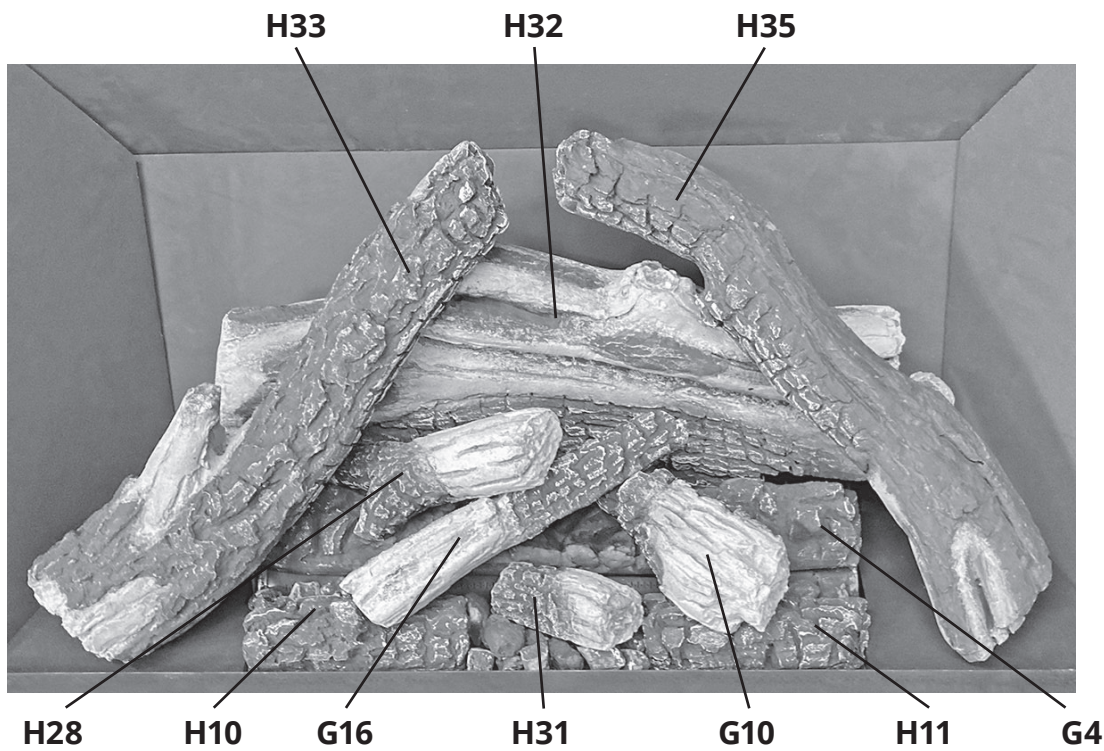

Completed G4 780M 1000LSKV2 Assembly

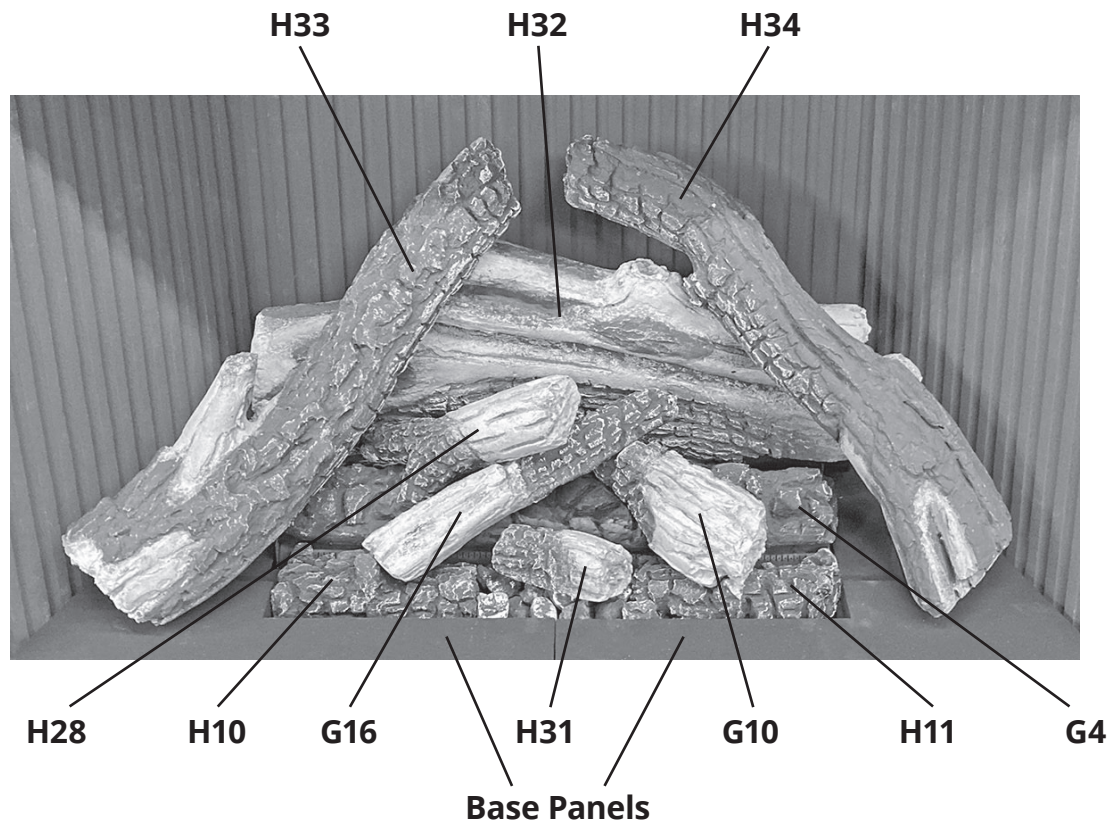

Because our policy is one of constant development and improvement, details may vary slightly from those given in this publication.

Designed and Manufactured by / for Miles Industries Ltd.

190 - 2255 Dollarton Highway, North Vancouver, B.C., CANADA V7H 3B1

Tel. 604-984-3496 Fax 604-984-0246

www.valorfireplaces.com

ADDENDUM—Installation bûches H3/G4 780M

Mai 2021

valor® H3/G4 780M

Bûches traditionnelles 1000LSKV2— Remplace les instructions d'installation 1000LSK

Description

L'ensemble Bûches traditionnelles 1000LSKV2 remplace l'ensemble 1000LSK. Certaines bûches ont été supprimées et d'autres modifiées pour un meilleur ajustement et une flamme améliorée.


Cet Addendum décrit comment installer l'ensemble Bûches traditionnelles 1000LSKV2 dans les foyers Valor H3 et G4 780M.

Pièces requises

- Bûche traditionnelles 1000LSKV2 contenant :
 - 10 bûches
 - 1 sac de braises de 2 tasses
- Gants, si désiré


Pièces

Description	Pièce n°
Bûche H32	4008905
Bûche H33	4008906
Bûche H34	4008617
Bûche G4	4008162
Bûche G10	4008168
Bûche H28	4007505
Bûche G16	4008306
Bûche H31	4007508
Bûche H10	4007472
Bûche H11	4007473
Braises—sac de 2 tasses	4008304

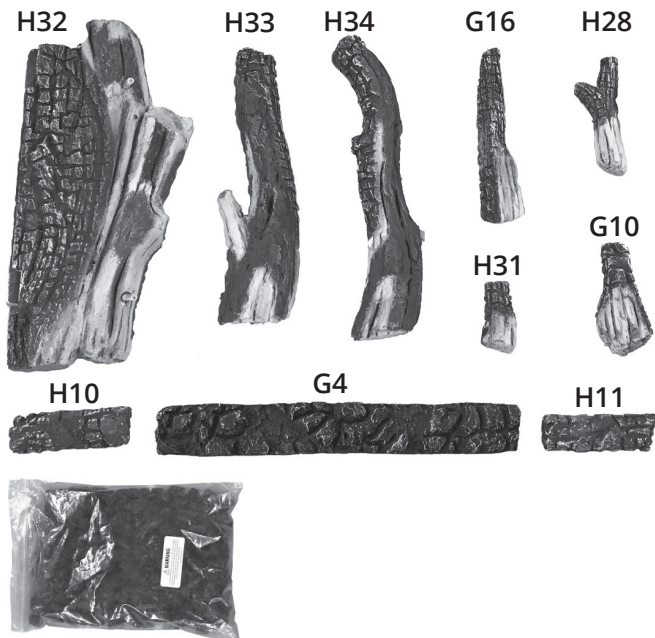

Couvercle du brûleur/Support de bûche


Cet ensemble peut être installé dans les foyers H3 ou G4 avec une ou l'autre version du couvercle du brûleur et support de bûche arrière :

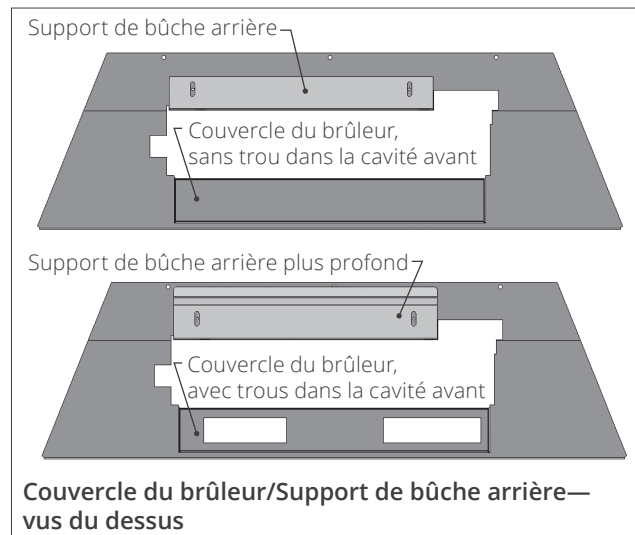


Installation

Déballez l'ensemble avec soins. Chaque bûche comporte un numéro gravé en-dessous. Certaines bûches ont également des chevilles aidant à les tenir en place.


1. **Foyers G4 780M seulement.** Une fois les panneaux intérieurs installés, assurez-vous que les briques avant soient également installées avant les bûches.
2. Placez la bûche H11, le bout angulaire à droite, dans la cavité de droite devant le brûleur.

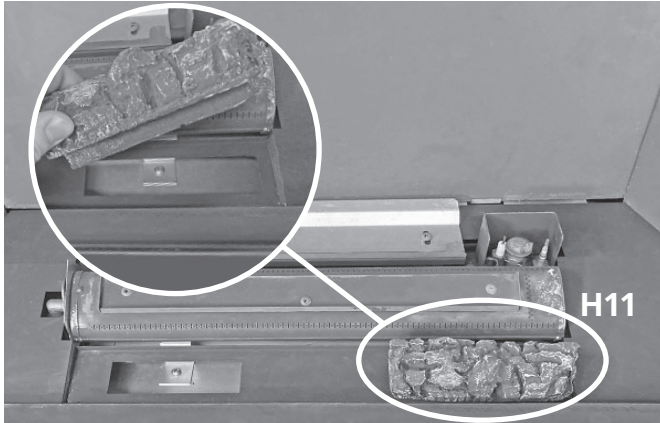



3. Placez H10 dans la cavité gauche, devant le brûleur.

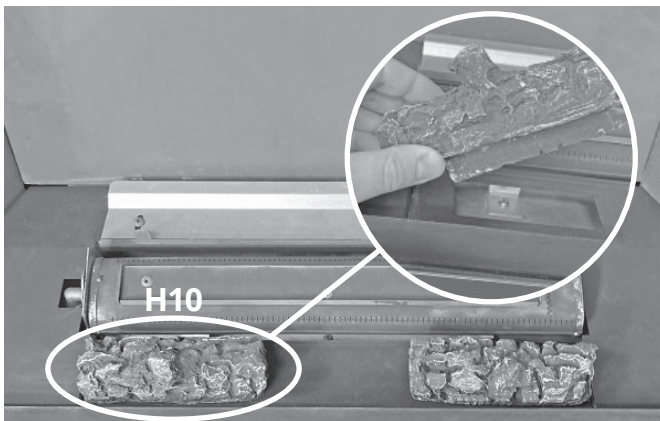


4. Placez H32 sur le support derrière le brûleur et poussez-la vers la droite contre l'écran de veilleuse.

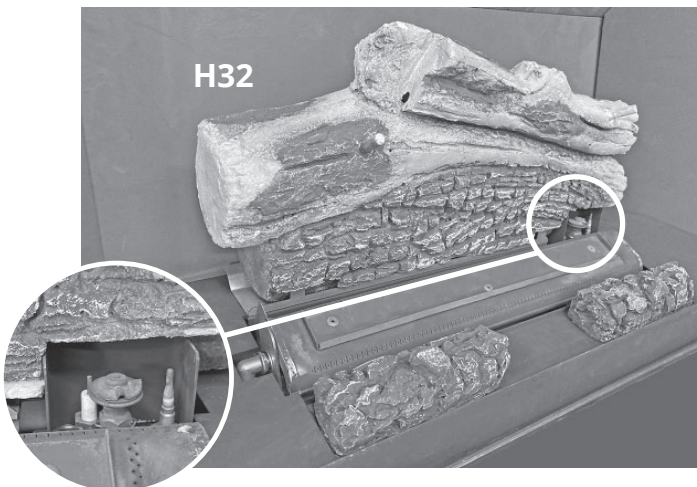


5. Placez G4 directement sur le brûleur, la fente sous la bûche sur le rebord montant du dessus du brûleur. Glissez la bûche le plus possible vers la gauche.

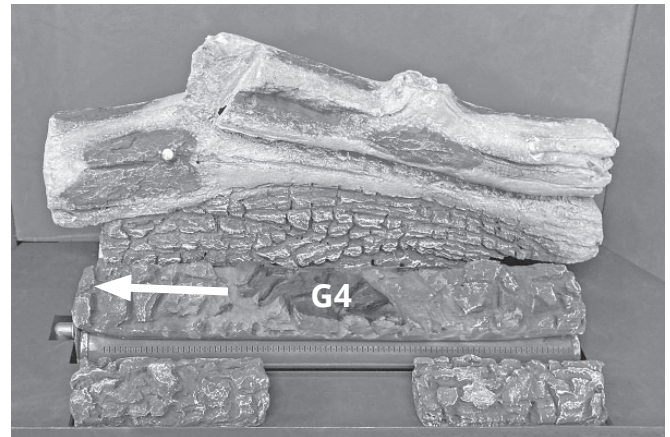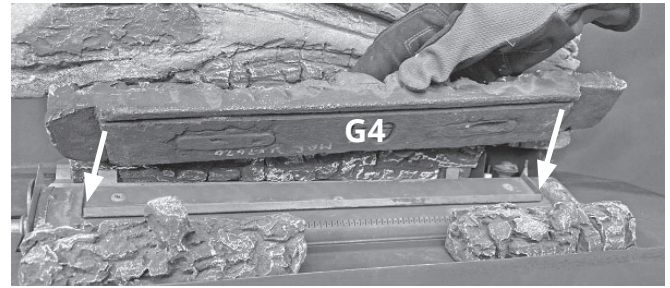

6. Placez le bout brûlé de G10 sur le centre droit de G4 et le bout pâle sur H11.

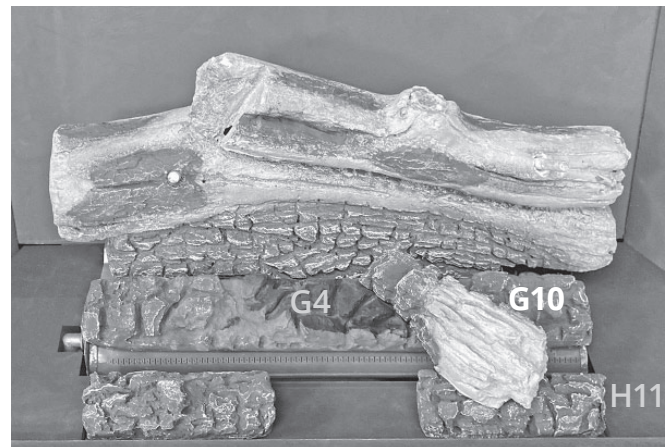

7. Placez le bout pâle de G16 dans l'encoche de H10 et le bout brûlé dans celle de G10.

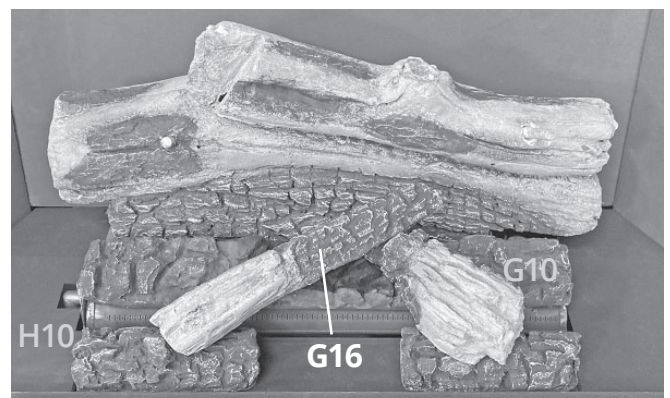


8. Placez le bout brûlé de H28 sur le côté gauche de G4 et posez son bout pâle sur G16.



11. Placez des braises entre H10 et H11. Placez-en derrière ces bûches, au choix. Il n'est pas nécessaire d'utiliser toutes les braises.




9. Placez H34 sur la cheville droite de H32 et posez son autre bout à droite de H11.

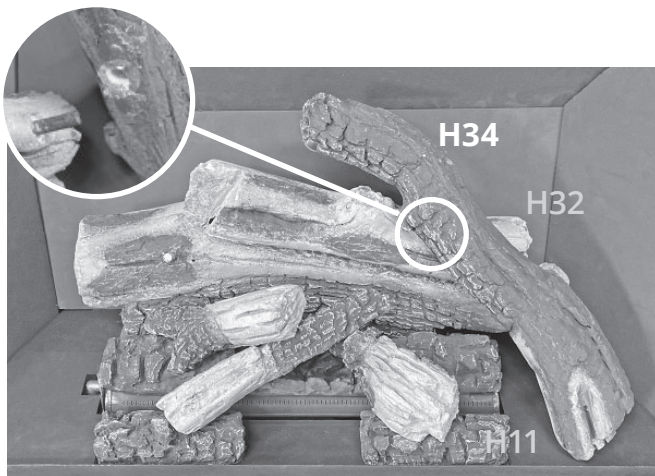

12. Placez H31 sur les braises entre H10 et H11.




10. Placez H33 sur la cheville gauche de H32 et posez son autre bout à gauche de H10.

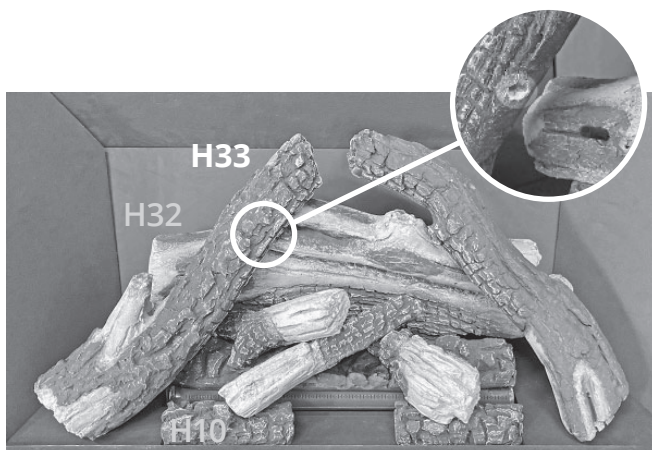


Une fois l'ensemble installé, continuez l'installation du foyer à l'aide du Guide d'installation fourni avec le foyer.

Bûches traditionnelles 1000LSKV2 dans le H3

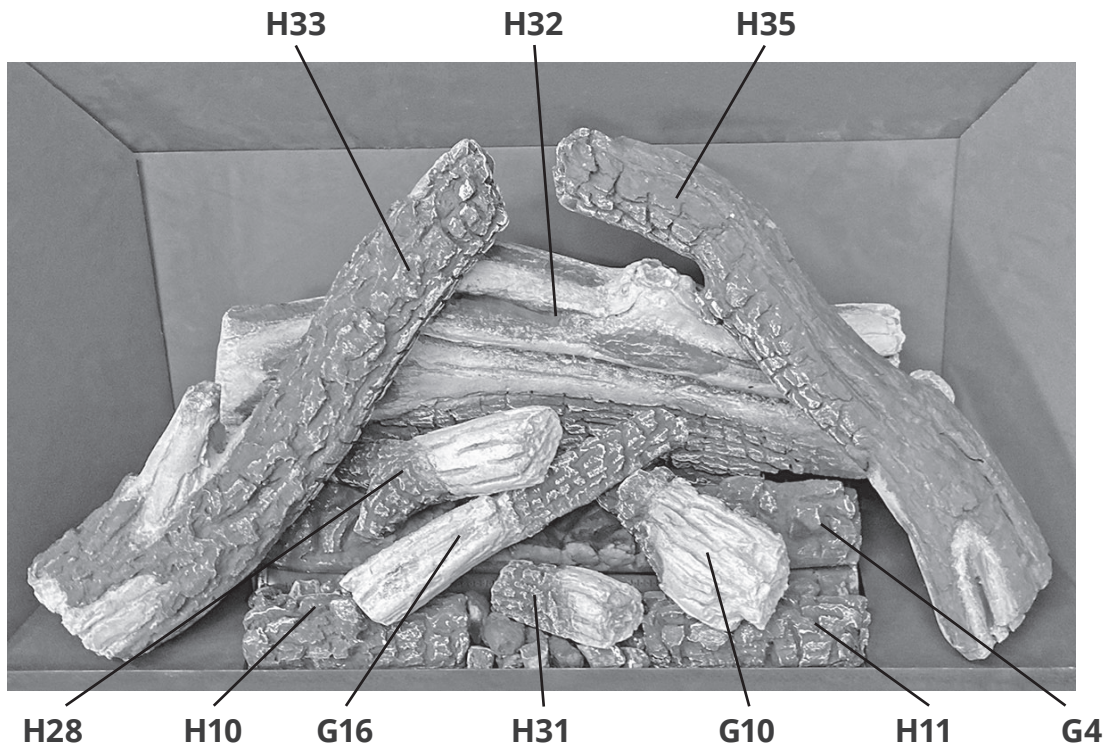

Bûches traditionnelles 1000LSKV2 dans le G4 780M

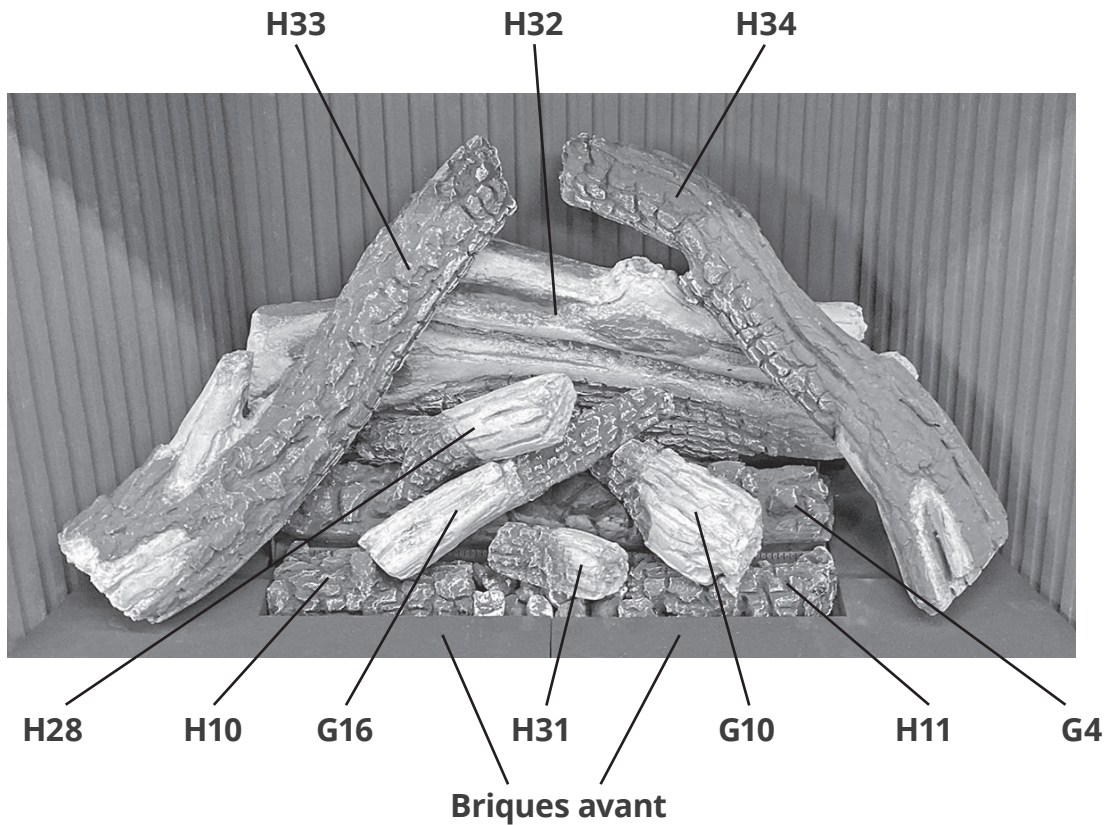

Parce que nous favorisons une politique de développement continu, certains détails de la présente publication peuvent varier.

Conçue et fabriquée par / pour Miles Industries Ltd.

190 - 2255 Dollarton Highway, North Vancouver, BC, CANADA V7H 3B1

Tél. 604-984-3496 Téléc. 604-984-0246

www.foyervalor.com